 


Quick Guide for Anti-Dust Kit

 
Overview

This quick guide is a simple installation for anti-dusk kit. After installing this anti-dusk kit, inverter will automatically detect this kit and activate internal thermal sensor to adjust internal temperature. This kit also keeps dusk from your inverter and increases product reliability in harsh environment.

Package Contents



Dustproof case




Air filter foam




Quick Guide

Assembly

Step 1: Please put one air filter foam to cover the ventilation of the inverter and then cover it with dustproof case as shown in below chart.

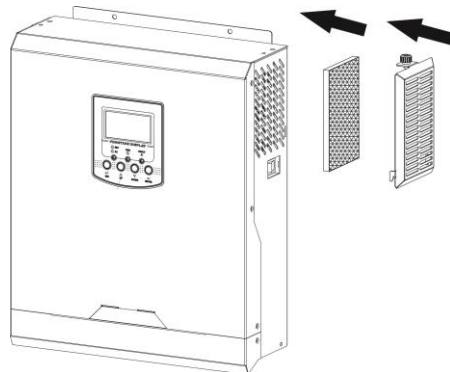

Step 2: Please fix the kit with screw in clockwise direction on the top of the inverter.

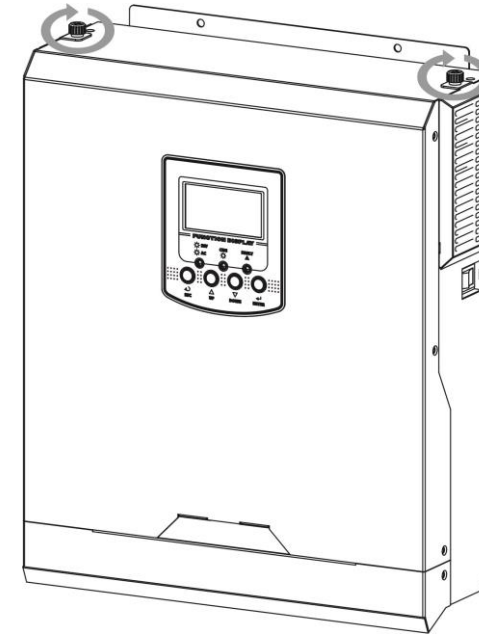

Step 3: Follow the same steps to install anti-dust kit in the other side of the inverter.

Clearance and Maintenance

- The anti-dust kit should be cleaned from dust every xx months.
-